

EzePorch

V4Track Window Care & Cleaning Instructions

Remember this is Vinyl Glazing, Not Glass

- **Do Not Use:** Any Harsh Cleaners or Detergents / No Formulas containing Bleach or Ammonia / No Pressure cleaners of any kind. Remove any jewelry from hands to avoid damage to Vinyl

Step 1: Cool, Remove Dirt & Debris


- Always Allow sashes to cool before washing. This will help reduce streaking and make them easier to clean.
- Thoroughly vacuum or wash all exterior areas of window frame and screens using a soft brush attachment to remove any loose dirt or dust from the screens. This will help keep your windows cleaner by removing any dirt trapped in the screen.
- Hose off the exterior of the sashes to remove excessive dirt or other debris.



Step 2: Removing Sashes

Note:

- EzePorch V4Track Windows have no moving parts. Vinyl sashes are spring loaded for easy removal.
- Remove sashes from main frame by compressing springs by sliding sash to the left. This will allow the right side to swing inward to remove the sash from the shallow depth frame liner.

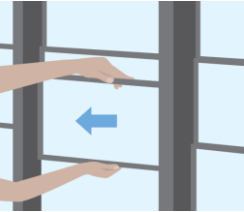

Step 3: Cleaning

- Rinse sashes with clear water first. Wash both sides of vinyl sashes using a soft, lint free cloth and a mixture of warm water and Woolite® or Murphy Oil Soap® (one cap-full to one gallon of water).



Step 4: Inserting Sashes

- When Finished cleaning, Be sure to install the top sash first, it always goes in the track closest to screen.
- The spring side of the sash goes in the deep liner side track first (left side as facing the window unit from interior of your room), then push into track to have the other side pop into the shallow liner side.
- Overlap the sashes when putting them in to the tracks, so the sashes interlock properly. Each sash will have its own track.
- Once all the sashes are properly installed, they will slide all the way up and down.

EzePorch LLC.

Phone:
(800) 264-4393

Web:
www.ezeporch.com

05/01/23