



## INSTRUCTIONS

1. Measure width of opening in 3 locations: top, middle, and bottom. *See Fig. 1.*
2. Measure the height in 2 locations: left and right. *See Fig. 1.*
  - a. Note the smallest number.
  - b. Measure in 3 locations for a French Door: left, middle, and right. *See Fig. 2.*
    - i. Note the smallest number.
3. Check opening for plumb, level, and square.
  - a. If any of these are off, adjust measurements accordingly to smallest size.
4. On the order form note the following:
  - a. Frame color, vinyl color and screen type (door screen always comes “trimmed”)
  - b. Width of rough opening (smallest number, do not make any deductions)
  - c. Height of rough opening (smallest number, do not make any deductions)
  - d. Swing of door (in-swing or out-swing) from outside looking in (OSLI) (*See Fig. 3*)
  - e. What side do you want the hinges on, left or right from outside looking in (OSLI)?
  - f. Threshold or no threshold (highly recommended on in-swing doors but not required)
  - g. Color of Handle
    - i. Black (standard)
    - ii. Oil Rubbed Bronze
    - iii. Satin Silver
  - h. Extra closer, out-swing doors only (doors come standard with 1 closer)
  - i. For **French Doors** please note:
    - i. All the above info (a through h)
    - ii. Which door do you want to be the primary door: Left or Right from outside looking in (OSLI)?

**Figure 1** SINGLE DOOR

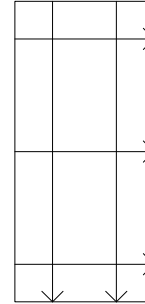

**Figure 2** FRENCH DOOR

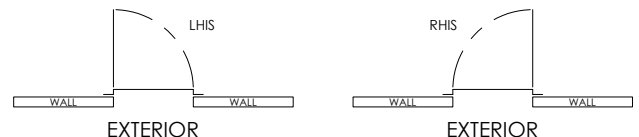

**Figure 3**

